
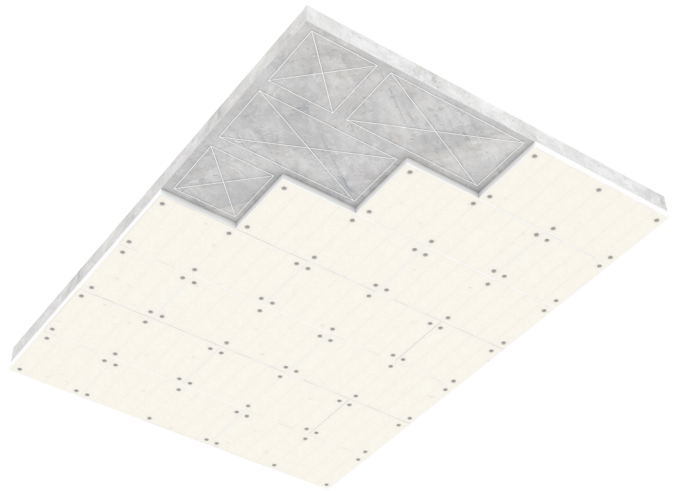


Installation Guide

Concrete Protection from Cellulosic Fire Exposure


Step 1

Run a bead of FIREFLYMastic around the perimeter of FIREFLYBatt nominally 50mm from the edge, then across from corner to corner or directly onto the ceiling.

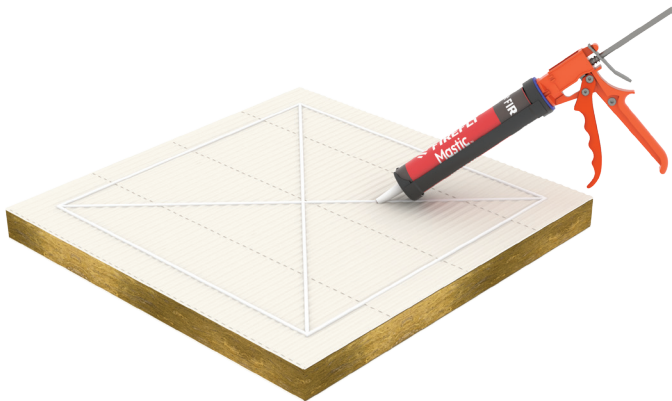


Step 2

Paint all green edges of FIREFLYBatt with FIREFLYMastic BG.

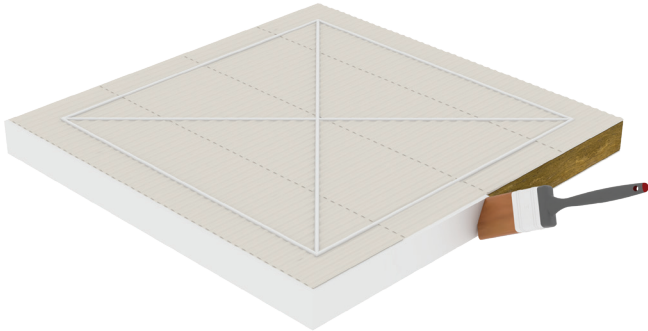

Step 3

Secure the FIREFLYBatt using 5 x 100mm long M6 hex head masonry screws and 30mm OD x 1.5mm penny washers. Install at 50mm from each corner and 50mm from the edge. Minimum 6 fixings per full 1200 mm x 600 mm FIREFLYBatt; minimum 4 fixings per 600 mm x 600 mm FIREFLYBatt or smaller.

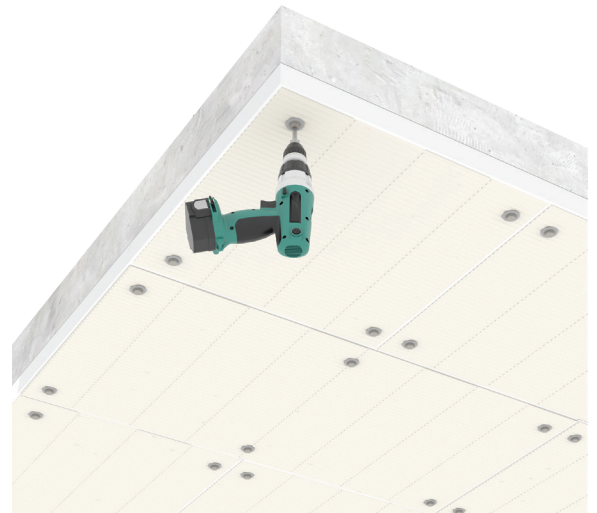

Step 4

FIREFLYBatt must be installed in a staggered brick-type pattern. If any green can be seen on the joints, paint it with FIREFLYMastic BG. The fixings do not require painting.

